


# Trolley for Type 91 Torpedo - Assembling Instructions

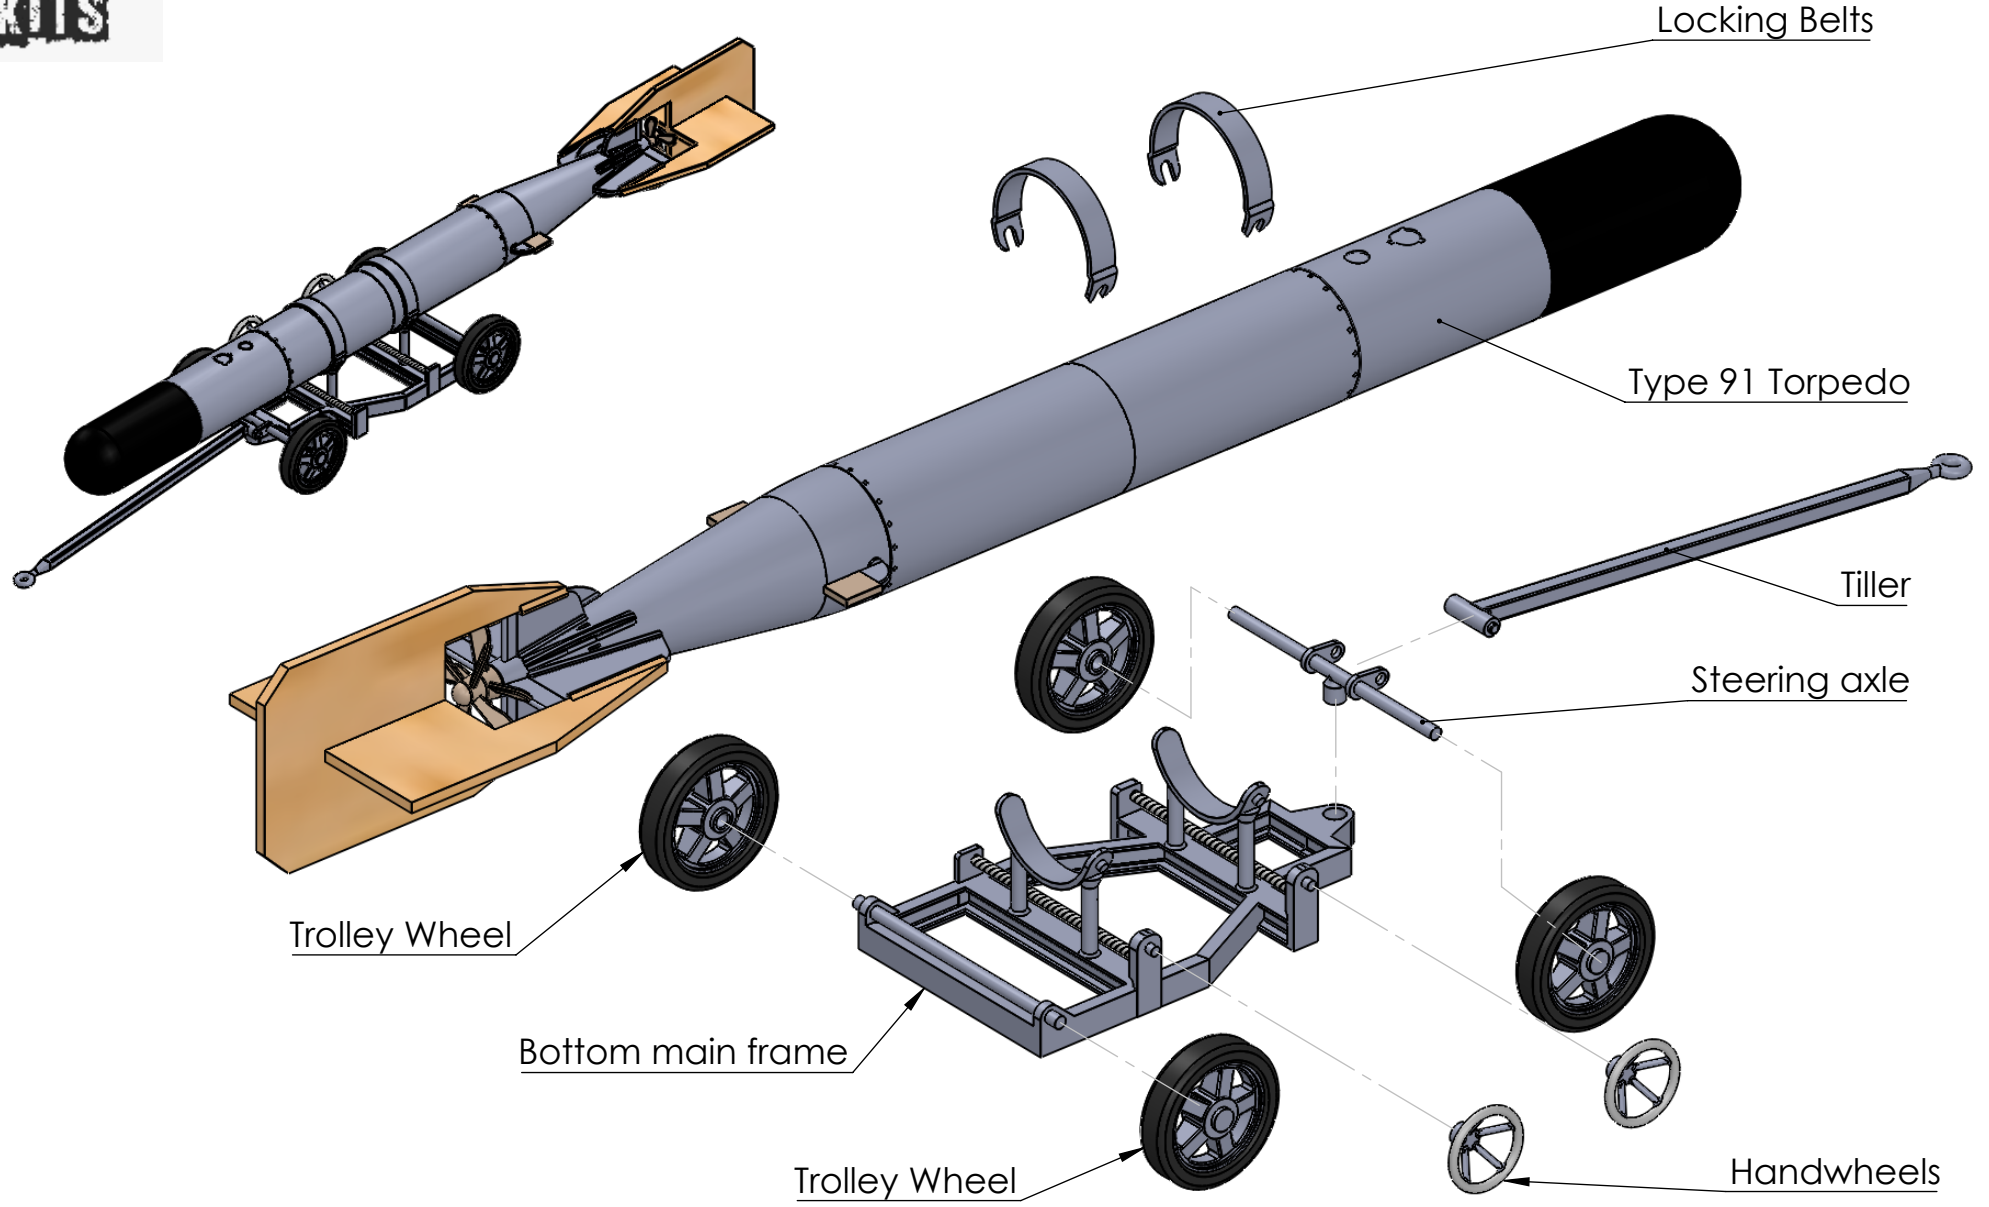

**Use Cyanoacrilate Glue**